Thinking of you

Electrolux

unirapido

Downloaded From Vacuum-Manual.com Manuals

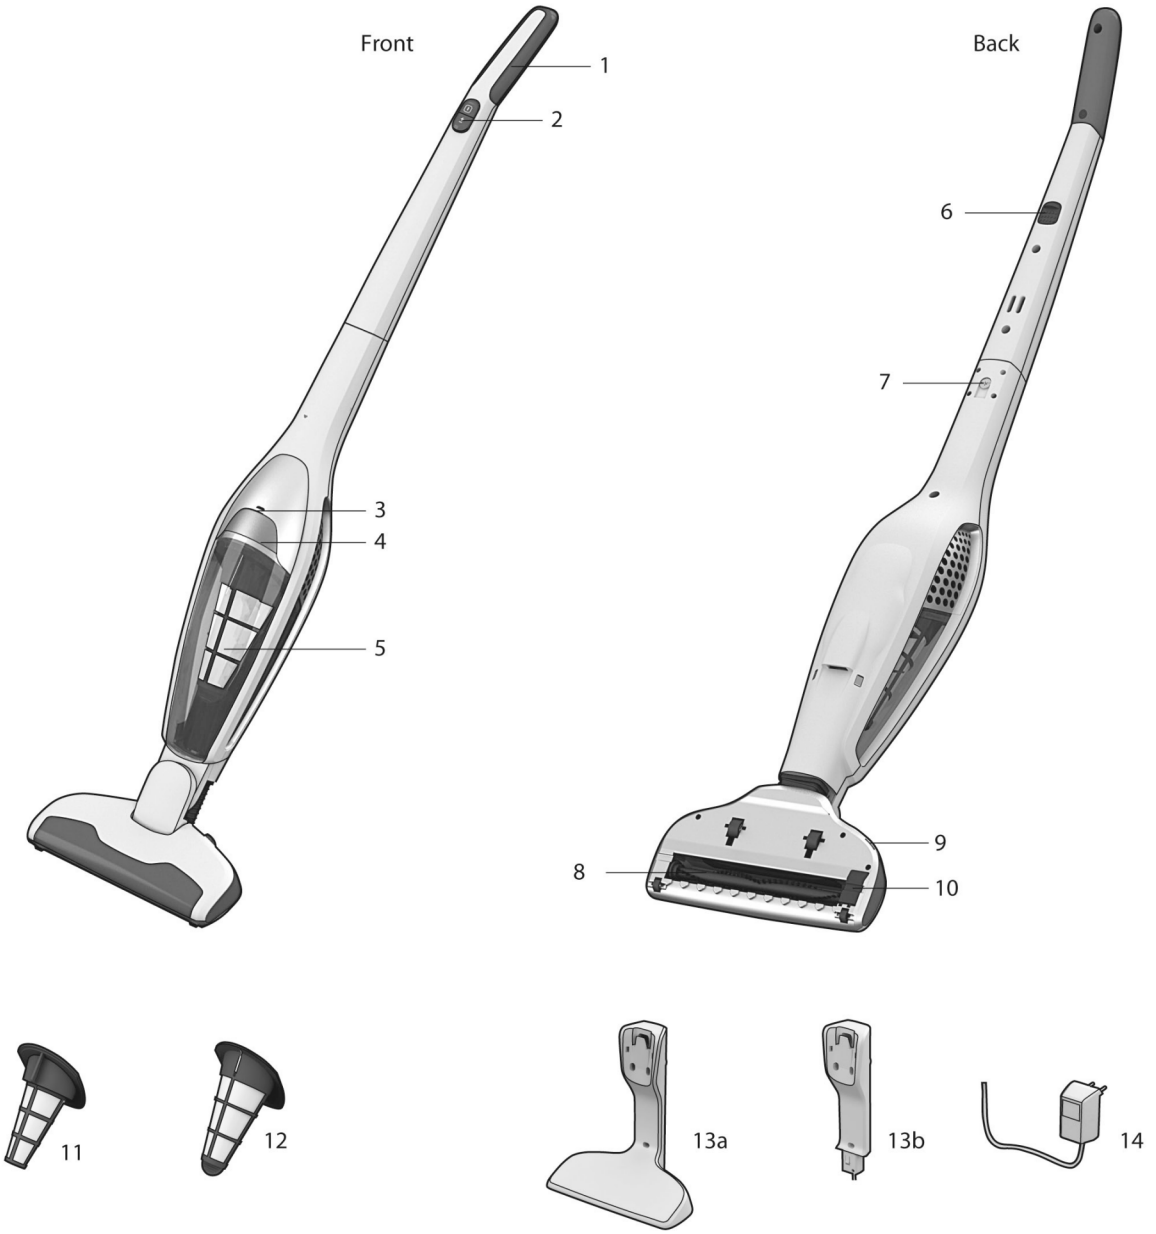

Downloaded From Vacuum-Manual.com Manuals

Thank you for choosing an Electrolux UniRapido vacuum cleaner. UniRapido is a rechargeable stick vacuum cleaner intended for use on light dry household debris. In order to ensure the best results, always use original Electrolux accessories. They have been designed especially for your vacuum cleaner.

BEFORE STARTING

- Unpack all details and check that the package includes all accessories relating to your UniRapido.
- Read the Instructions for Use carefully.
- Pay special attention to Safety advice chapter.

Enjoy your Electrolux UniRapido!

TABLE OF CONTENTS

Unpacking and charging	3-4
Cleaning the filters and dustcontainer	5
Cleaning brush roll, wheels and bellows	6
Removing the batteries and disposal	7
Safety precuations	8
Consumer information	9

DESCRIPTION OF YOUR UNIRAPIDO

1 Soft touch handle
2 On/off button
3 Charging/running indicator light
4 Container release button
5 Dust container
6 Parking rubber knob
7 Locking screw
8 Brush roll
9 Brush roll release button
10 Hatch cover for brush roll
11 Fine filter (inner filter)
12 Pre filter (outer filter)
13a Charging station, floor unit
13b Charging station, wall unit
14 Adaptor

Downloaded From Vacuum-Manual.com Manuals

UNPACKING AND ASSEMBLY

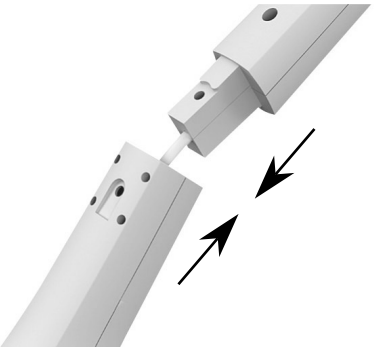

1 Fit the handle by carefully inserting it into the lower main body Make sure that the cable does not jam.

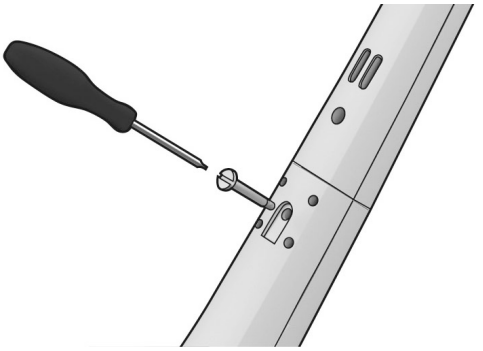

2 Secure the handle by tightening the locking screw supplied Use a screwdriver or a coin.

CHARGING STATION

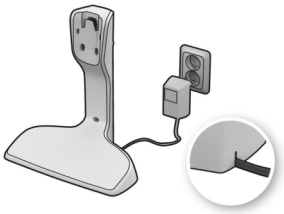

1 Position the charging station close to a mains (well away from heat sources, direct sunlight or wet places) Insert the adaptor into the mains socket and connect it to the charging station.

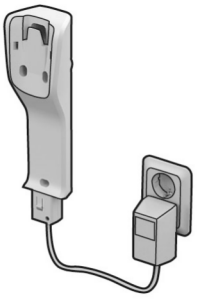

2 The wall unit can also be mounted on a wall Always ensure that the wall can bear the weight of UniRapido.

Downloaded From Vacuum-Manual.com Manuals

CHARGING

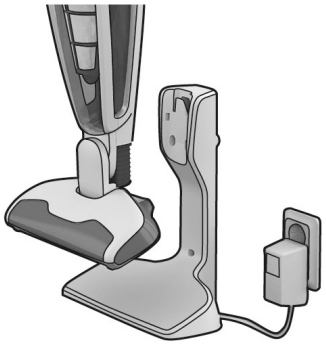

1 Place UniRapido in the charging station always make sure that UniRapido is turned off when placed in the charging station .

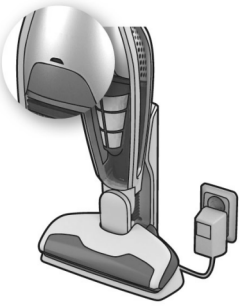

2 Charging!

First use: up to 24 hours charging
Fully discharged: 16 - 24 hours charging

Leave UniRapido on charge when not in use. Warm adaptor is normal.

START/STOP

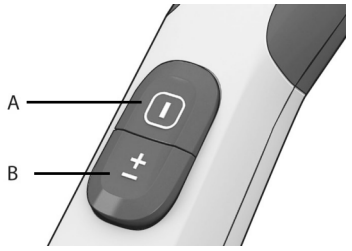

1 Start UniRapido by pushing the on/off button
A Press for start/stop (Start on maximum cleaning power)
B Press for intermediate power

VACUUMING FLOORS AND CARPETS

Avoid scratching sensitive areas by checking that nozzle wheels and brush roll are clean.

Downloaded From Vacuum-Manual.com Manuals

CLEANING THE FILTERS AND DUSTCONTAINER

UniRapido's dust container must be emptied regularly, plus dust container and filters need to be cleaned to maintain a high suction power.

Clean the filters every third emptying or when UniRapido has low suction power Make sure parts are dry before reassembling.

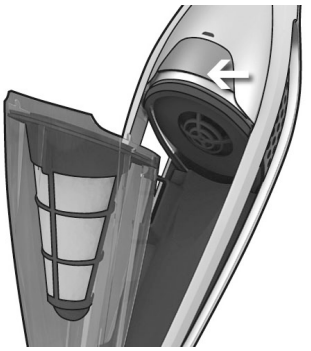

1 Release the whole dust container by pushing the release button.

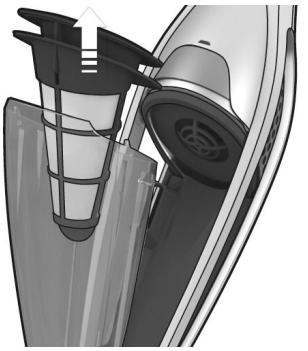

2 Take out both filters.

3 Empty the content into a wastepaper basket.

4 Separate filters. Shake them clean or rinse separately using warm water. Make sure fi lters are dry before reassembling in reverse order.

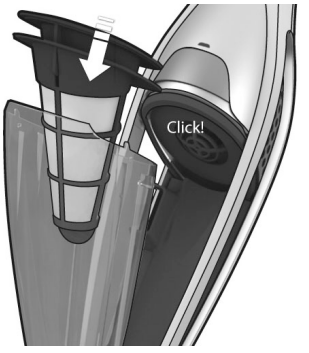

5 Put the filters back and press back the dust container in reverse orde.r

Downloaded From Vacuum-Manual.com Manuals

CLEANING THE BRUSH ROLL

If the brush roll becomes blocked or jammed, a protection circuit will block the power supply to the motor. Then clean the brush.

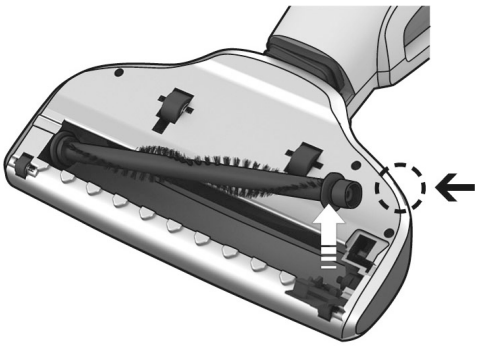

1 Push the brush roll release button. The hatch cover will come slightly free and the brush roll can now be removed.

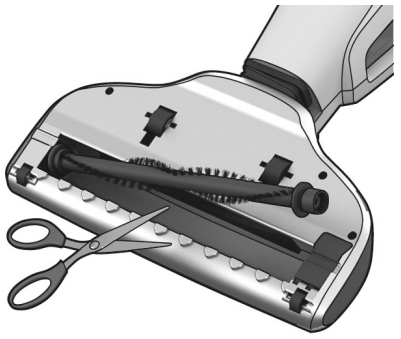

2 Carefully use a sharp object to remove hair or threads. Replace the brush roll and make sure that it fi ts into its guiding tracks, and that it can spin freely. Replace the hatch cover.

CLEANING THE WHEELS

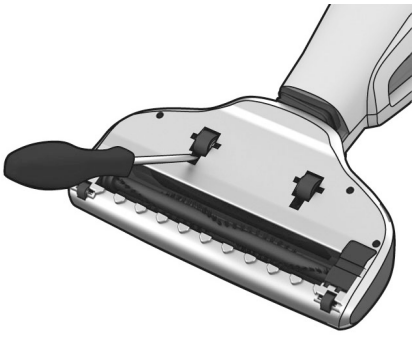

1 If the wheels needs to be cleaned, remove them carefully by using a small screwdriver.

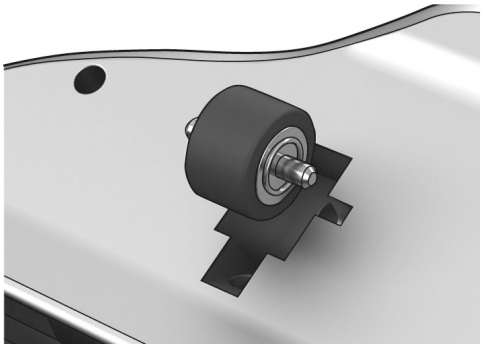

2 Remove objects that have become jammed in the wheel shafts. Reassemble the wheels by pressing them back into their tracks.

CLEANING THE BELLOWS

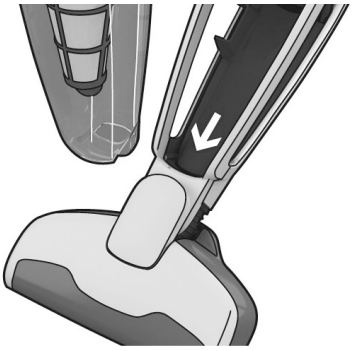

1 Occasionally objects can get stuck in the bellows, and this can affect suction power. Clean the bellows after removing the dust cup.

Downloaded From Vacuum-Manual.com Manuals

DISPOSAL

REMOVING BATTERIES

Only remove batteries if product is to be scrapped.

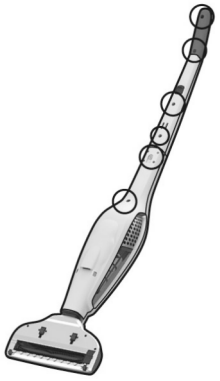

1 Run batteries fl at and disconnect UniRapido from the charging station Undo the 11 screws (2 of them hidden under the release button).

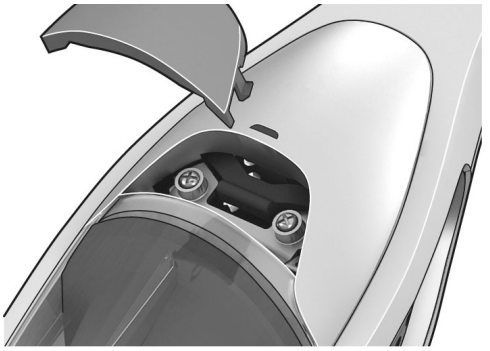

2 Release the button and carefully lift the hood.

3a Unclip the connecting cables and lift out the batteries Batteries should be removed from the appliance before it is scrapped.

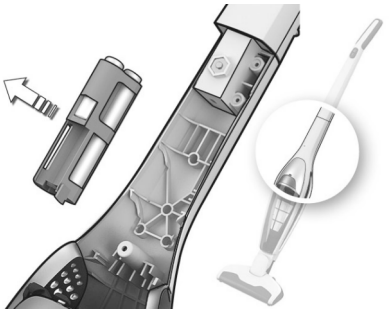

3b Unclip the connecting cables and lift out the batteries Batteries should be removed from the appliance before it is scrapped.

Used batteries should always be taken to a recycling Station.

Downloaded From Vacuum-Manual.com Manuals

UniRapido should only be used by adults and only for normal vacuuming in adomestic environment. Make sure the vacuum cleaner is stored in a dry place. Allservicing and repairsmust be carried out by an authorized Electrolux service centre.

This appliance is notintended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Please remove the plug from the socket outlet before cleaning or maintaining the appliance.

Children should be supervised to ensure that they do not play with the appliance.

Each vacuum cleaner is designed for a specific voltage. Check that your supply voltage is the same as that stated on the rating plate. Use only the original charging adaptor designed for this model.

Never use the vacuum cleaner

- In wet areas.
- Close to flammable gases, etc.
- When housing shows visible signs of damage.
- On sharp objects or fluids.
- On hot or cold cinders, lighted cigarette butts, etc.
- On fine dust, for instance from plaster, concrete, flour, hot or cold ashes.
- Do not leave the vacuum cleaner in direct sunlight.
- Avoid exposing the vacuum cleaner or battery to strong heat.
- The battery must not be dismantled, shortcircuited, placed against a metal surface or exposed to strong heat.
- Without filter.

Using the vacuum cleaner in the above circumstances may cause serious damage to the product. Such damage is not covered by the warranty.

Servicing or repairs

In cases of breakdown or faults, your UniRapido must be taken to an authorized Electrolux service centre. If the supply cord is damaged, it must be replaced by Electrolux or its service agent or a similarly qualified person in order to avoid a hazard.

Downloaded From Vacuum-Manual.com Manuals

CONSUMER INFORMATION

Electrolux decline all responsibility for all damages arising from any improper use of the appliance or in cases of tampering with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

This product is designed with the environment in mind. All plastic parts are marked for recycling purposes.
For details see our web site:
www.electrolux.com

If you have any comments on the cleaner or the Instructions for Use booklet please e-mail us at:
floorcare@electrolux.com

If you can´t find accessories to your Electrolux vacuum cleaner, please visit our website at
www.electrolux.co.uk
or call 08706 055 055.

Downloaded From Vacuum-Manual.com Manuals

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL THE INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not leave vacuum cleaner when plugged in.
- Do not allow to be used as a toy. Close attention is necessary when used near children. Do not allow children to operate this appliance and accessories.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service centre before using.
- Do not pull or carry by cord, do not use cord as a handle, and do not close door on cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening block, keep free of dust, lint, hair and anythingthat may reduce air flow.
- Do not use to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without dustbag in place.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS

Downloaded From Vacuum-Manual.com Manuals

ELECTRICAL SUPPLY INSTRUCTIONS

Before you start …check the voltage
Before connecting the cleaner to an electrical supply ensure that voltage marked on the data plate (on the underside of cleaner) is correct for your electrical supply. If is not, do not use the cleaner but refer back to your dealer.

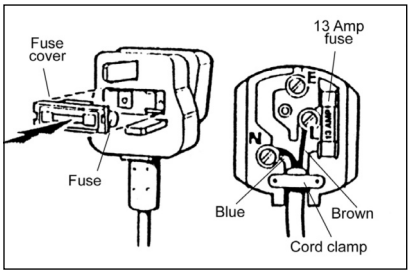

Connecting to your electrical supply
Permanently connected to the cleaner is a mains supply (2-core) cable fitted with a non-rewirable plug incorporating a 13A fuse. In the event of the fuse requiring replacement the fuse cover should be removed using a small screwdriver. The old fuse MUST be replaced by a 13A ASTA approved BS1362 fuse and the fuse cover must be replaced before the plus is used again. In the event of loss of the fuse cover, replacements can be obtained from your Electrolux dealer or Electricity Board and must be of the same colour as indicated by the coloured insert on the base plug.
If difficulty is experienced in obtaining a replacement, contact your nearest Electrolux Service Centre. (Please see the separate Electrolux Service Organisation leaflet).

In no circumstances must the plug be used without a correct fuse cover fitted.
If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted. Remove the fuse from the cut off plug. The cut off plug should then be disposed of to prevent hazard of shocks in case it should be plugged into a 13 Amp socket in another part of your home.

The wires in the mains cable of this appliance are coloured in accordance with the following code:

Blue: Neutral.

Brown: Live.

As the colours of the wires in the mains cable of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked the letter L or coloured red.

If using a three-pin plug, do not make any connection to the terminal marked with the letter E or by the earth symbol or coloured green or green-and-yellow. [This cleaner is double insulated and no earth-connection is necessary.]

It is in your interest to ensure that the plug is correctly attached to the mains cable. In case of doubt, have it done by a qualified electrician, as Electrolux cannot regard the repair of faults on the plug connection as a service that can be given free of charge under the terms of guarantee.

As a general guide to fitting any plug
- Ensure the lengths of wire inside the plug are prepared correctly.
- Connection should be firmly made after all conductor stands are entered into the terminal posts.
- When preparing the cable ends take care not to damage the outer seal, or insulation surrounding the inner conductors.
- Tighten all screws.
- Replace the top cover of the plug and secure.

Downloaded From Vacuum-Manual.com Manuals

GUARANTEE

This guarantee is in addition to your statutory and other legal rights.

Electrolux products are carefully designed, manufactured, tested and inspected and in consequence, we undertake to replace or repair any part found to be defective in material or workmanship, within one year of delivery to the original purchaser, free of charge. You may be required to take the product to your nearest service provider if the product requries attention during the first year.

There are certain conditions which may invalidate this guarantee:

a. It is dependent upon the appliance being correctly installed and used in accordance with the Company's instructions under normal domestic conditions within the United Kingdom or the Republic of Ireland.
b. Service at all times must be carried out by an Electrolux Service Representative or authorised agent.
c. The guarantee may be invalidated by unauthorised repair or modification of the appliance.
d. You may be charged by the Electrolux Group if you call for an engineer to resolve a problem that we believe is covered in the instruction booklet.

The Company does not accept liability for defects arising from neglect, misuse or accident. This guarantee excludes such normal wearing parts as filters, brushes and dustbags as the life of these depends upon the amount and nature of use.

Proof of the date of purchase will be required before service under guarantee is provided.

For further assistance call the Electrolux Group Floorcare Helpline on 08445 614 614.
Calls to this number will be charged at 5 pence per minute at all times from a BT Landline.

Important:

For future reference we suggest you record the following details here, and keep the receipt with this booklet as proof or purchase.

Purchased from: _____

Date purchased _____ Model No _____

Thinking of you

Electrolux

The Electrolux Group, Addington Way, LUTON, BEDFORDSHIRE, LU4 9QQ
Features of the Electrolux vacuum cleaner and accessories with it are protected in Great Britain and abroad by Patents of Registered Designs.
This appliance conforms with the requirements of the amended E.E.C. directive No. 89/336/EEC relating to electromagnetic compatibility (EMC) CE.
The Electrolux Group may introduce modifications to their product from time to time, and consequently the details given in this booklet are subject to alteretion without notice.

ZB2805EN-2-rev1

Downloaded From Vacuum-Manual.com Manuals

Downloaded From Vacuum-Manual.com Manuals

Downloaded From Vacuum-Manual.com Manuals

Thinking of you

Electrolux

Share more of our thinking at www.electrolux.com

ZB2805EN-2-rev1

Downloaded From Vacuum-Manual.com Manuals